

# SpeedyPacker system

## Procedure for Cleaning the Cross Cut Wire.

This procedure must be carried out by trained and qualified personnel




1) Turn OFF the SpeedyPacker and open the front cover.



2) Lower the front sealing jaw by unlatching the black/red brackets.



3) Loosen the bolt at the right side of the front sealing jaw and lower the film guide bar (metal plate) on one side.

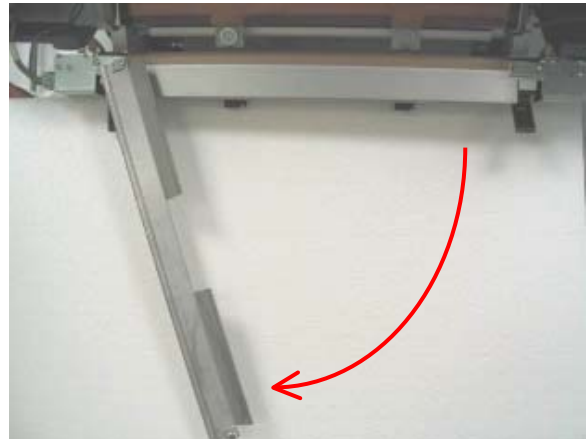

If your system is equipped with this Cross Cut Wire, follow Procedure 1.




If your system is equipped with this Cross Cut Wire, follow Procedure 2.



### Procedure 1




4) Carefully lift the cross cut wire a little bit the middle, fold the scotch pad around the wire and slide the pad over the wire to remove any debris.

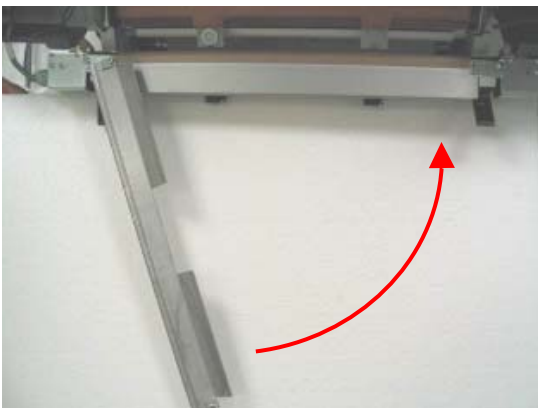


5) After cleaning the wire:  
- Re-mount the film guide bar  
- Raise the front sealing jaw and latch the left and right black plastic brackets  
- Close the front cover and turn ON the SpeedyPacker.


### Procedure 2

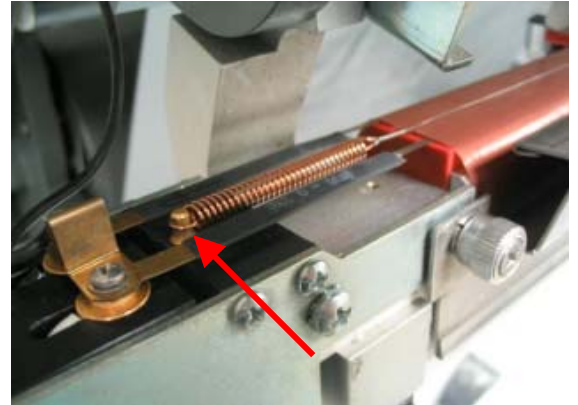

4) Carefully lift one end of the cross cut wire from the contact pin.

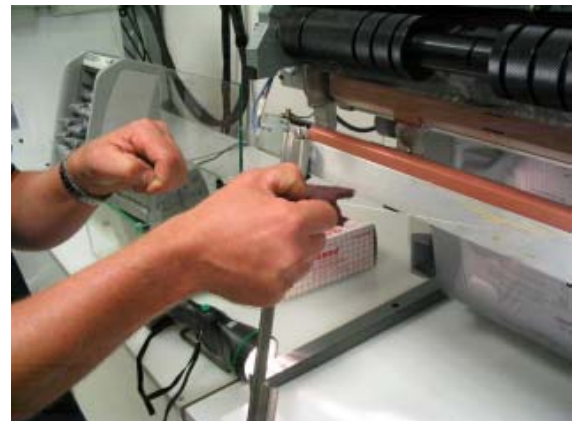

5) Keep the wire a little bit under tension and use the scotch pad to clean the wire.

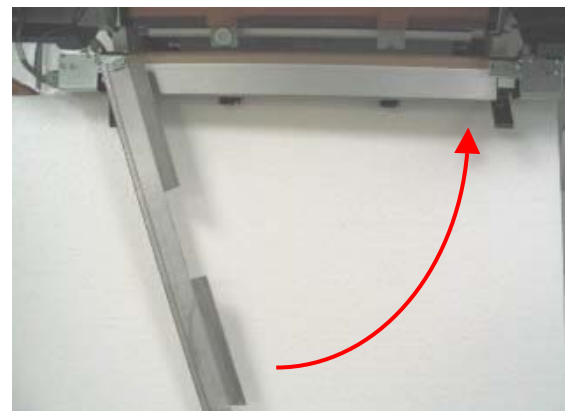

6) - Re-install the wire  
- Re-install the film guide bar  
- Raise the front sealing jaw and latch the black plastic brackets  
- Close the front cover and turn ON the SpeedyPacker.