


# Teaching the Photo Eye

ד"ר. סי. פאק בע"מ  
 קיבוץ חורשים  
 ד.ג.השרון התיכון 45865  
 טל' 03-9005555 פקס: 03-9005500

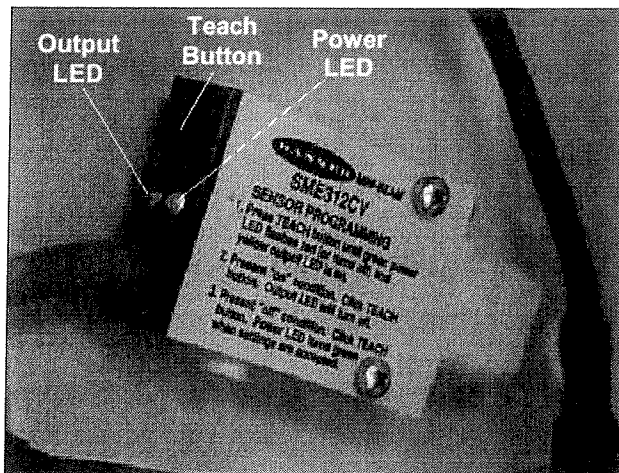

1. Install a film roll onto the Film Tension Assembly.
2. Turn the power on. Open the Dispenser Cover.
3. Confirm that the power LED is green. Press and **HOLD** the "TEACH" button until the green power LED flashes red (or turns off) and yellow output LED is on (see figure).
4. Pull film so that the black eye bar (2" x 2") is in front of the Photo Eye.
5. Press the "TEACH" button momentarily (**DO NOT HOLD DOWN THE BUTTON**). The output LED should shut off.
6. Pull film so that white film is in front of the Photo Eye.
7. Press the "TEACH" button momentarily (**DO NOT HOLD DOWN THE BUTTON**). The Power LED turns green when settings are accepted.

לפי מ'ע'ן ק"ק  
 מ'ע'ן ק"ק  
 Instruction Table top

03-9005500  
 03-9005500  
 03-9005500

**Meir Ziskin**  
 Instpack Sales manager  
[meir@dcpack.co.il](mailto:meir@dcpack.co.il)  
 +972-52-3426135